COSMOS LED "Green Thinking

User Manual

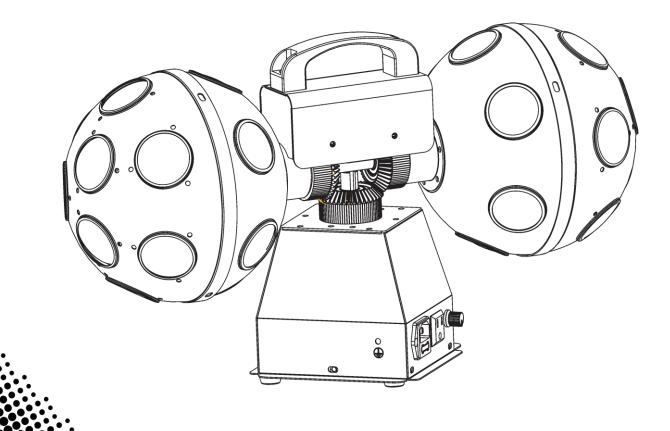




TABLE OF CONTENTS

1. BEFORE YOU BEGIN	
What is included	3
2. INTRODUCTION	5
Product Overview	5
3. SETUP	6
AC Power Power Linking MOUNTING Orientation Rigging	
4. OPERATING INSTRUCTIONS	8
Adjusting the Rotation Speed	8
5. APPENDIX	9
GENERAL TROUBLESHOOTING	10
TECHNICAL SPECIFICATIONS	10
CONTACT US	12

1. BEFORE YOU BEGIN

What is included

- 1 x Cosmos™ LED
- 1 x Mounting Bracket
- 1 x Power Cord
- 1 x Warranty Card
- 1 x User Manual

Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Icons

This manual uses the following icons to indicate information that requires special attention on the part of the user.

Icons	Meaning	
<u>^</u>	This paragraph contains critical installation, configuration or operation information. Failure to comply with this information may render the fixture partially or completely inoperative, cause damage to the fixture or cause harm to the user.	
(i)	This paragraph contains important installation or configuration information. Failure to comply with this information may prevent the fixture from functioning correctly.	
	This paragraph reminds you of useful, although not critical, information.	

Safety Instructions




Please read these instructions carefully. It includes important information about the installation, usage and maintenance of this product.

- Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only! To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing fuse and be sure to replace with same fuse source.
- Secure fixture to fastening device using a safety chain.
- Maximum ambient temperature (Ta) is 104° F (40° C). Do not operate fixture at temperatures higher than this.
- In the event of a serious operating problem, stop using the unit immediately. Never try
 to repair the unit by yourself. Repairs carried out by unskilled people can lead to
 damage or malfunction. Please contact the nearest authorized technical assistance
 center.
- Never connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Never carry the fixture directly from the cord. Always use the hanging/mounting bracket.
- Avoid direct eye exposure to the light source while it is on.

2. Introduction

Product Overview

Back Panel

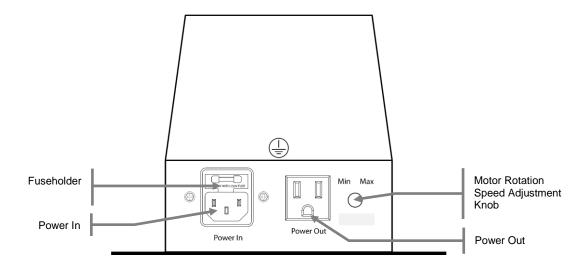

3. SETUP

AC Power

This fixture runs on 100~240 VAC, 50/60 Hz. Before powering on the unit, make sure the line voltage to which you are connecting it is within the range of accepted voltages.

To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating indicates its average current draw under normal conditions.



Always connect the fixture to a switched circuit. Never connect the fixture to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used only as a 0 to 100% switch.




Always connect the fixture to a circuit with a suitable electrical ground.


Power Linking

This fixture contains power linking via the Edison outlet located in front of the power input cable. Please see the diagram below for further explanation.



The maximum quantity of Cosmos™ LEDs that may be linked is 24.

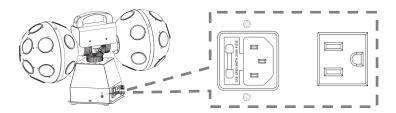

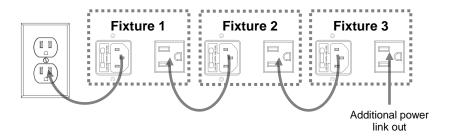



The <u>power linking</u> shown in this document is for the Chauvet® North American version ONLY! Therefore, it is the customer's responsibility to check with the Dealer/Distributor regarding power linking on the local version of the product. Connections and availability may change, depending on the power requirements and/or regulations of each country/region.

Mounting


Orientation

The Cosmos™ LED may be mounted in any safe position provided there is adequate room for ventilation.

Rigging

Be sure that the structure can support the weight of the fixture. Please see the "Technical Specifications" section of this manual for a detailed weight listing. Mount the fixture securely. This may be done with a screw, nut, and bolt, or a hanging clamp. The hole in each bracket is 13 mm in size. When rigging, consider routine maintenance and control panel access. Please see the following steps for installation.

- You may set this on a surface, using the four rubber feet. Or, you may install the mounting bracket and mount this product.
- If the power link out is intended to be used with multiple fixtures, take into account the length of each power cable, and mount the fixtures close enough to one another.
- Always use safety cables.
- Never grab this fixture by the balls! Always use the carrying handle when moving this
 fixture.

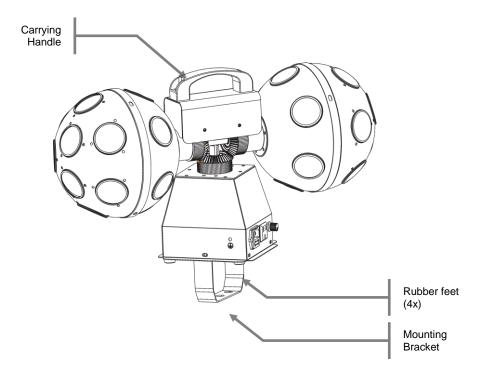

4. OPERATING INSTRUCTIONS

Adjusting the Rotation Speed

The rotation speed of this product may operate from $0\sim100\%$. Use the rotation adjustment knob to adjust the speed.



The LEDs will change to the beat of the music, using the internal microphone. The LED program is not adjustable.

5. APPENDIX

General Troubleshooting

SYMPTOM	Possible Cause(s)	Possible Action(s)
Breaker/Fuse keeps blowing	Excessive circuit load	Check total load placed on the electrical circuit.
	Short circuit along the power wires	Check for a short in the electrical wiring (internal and/or external).
Device does not power up	No power	Check for power on Mains.
	Loose power cord	Check power cord



If you still have a problem after trying the above solutions, please contact CHAUVET® Technical Support.

General Maintenance

To maintain optimum performance and minimize wear, fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

- Unplug fixture from power.
- Use a vacuum or air compressor and a soft brush to remove dust collected on external vents
- Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue.
- Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens.
- Gently polish optical surfaces until they are free of haze and lint.



Always dry the parts carefully after cleaning them.



Never spin a fan using compressed air.

Returns Procedure

Returned merchandise must be sent prepaid and in the original packing; call tags will not be issued. Package must be clearly labeled with a Return Merchandize Authorization Number (RMA #). Products returned without the RMA # will be refused. Call CHAUVET® and request an RMA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to pack fixture properly; any shipping damage resulting from inadequate packaging is the customer's responsibility. As a suggestion, proper UPS packing or double-boxing is always a safe method to use. CHAUVET® reserves the right to use its own discretion to repair or replace product(s).



If you are given an RMA #, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) The RMA #
- 5) A brief description of the symptoms

Claims

Damage incurred in shipping is the responsibility of the shipper; therefore, the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

TECHNICAL SPECIFICATIONS

WEIGHT & DIMENSIONS Length
POWERAuto-ranging Power Supply
LIGHT SOURCE Type Tri-color LEDs Quantity 4 red (350 mA), 4 green (350 mA), 4 blue (350 mA) Rating 50,000 hrs
PHOTO OPTIC Coverage angle
INDOOR/OUTDOOR Rating
THERMAL Maximum ambient temperature
ORDERING INFORMATION Cosmos™ LEDCOSMOSLED
WARRANTY INFORMATION Warranty

CONTACT US

World Wide

General Information **CHAUVET®**

5200 NW 108th Ave Sunrise, FL 33351 voice: 954.929.1115 fax: 954.929.5560 toll free: 800.762.1084

Technical Support CHAUVET®

5200 NW 108th Ave Sunrise, FL 33351

voice: 954.929.1115 (Press 4) fax: 954.929.5560 (Attention: Service)

World Wide Web www.chauvetlighting.com